

Installation Guide

STEP 1

Remove the bolt assembly by holding down the bolt release catch and pulling the bolt backwards (Fig. 1).



Safety information:
Before you begin, be certain that the gun is empty and clear.



STEP 2

CAUTION: The bold shroud retains the firing pin spring under high compression. Take care while removing. While keeping firm pressure on the end of the shroud, carefully remove the bolt shroud retaining pin, then slowly ease pressure until the firing pin spring is uncompressed. (Fig.2). Remove old bolt shroud and cocking indicator and set aside (Fig.2a).

STEP 3

Install spring over the narrow end of the new cocking indicator, then insert into the new bolt shroud narrow end first (Fig.3).



Fig.3



STEP 4

Slide centre peg of the new bolt shroud through the centre of the firing pin spring, ensuring the cocking indicator slot lines up with the raised key at the rear of the firing pin sleeve (Fig. 4).




TIKKA TIX ALLOY BOLT SHROUD

Installation Guide

STEP 5

Press firmly on the end of the bolt shroud until the retaining pin holes in the shroud and the bolt line up (Fig.5a). Then install bolt shroud retaining pin (Fig.5).



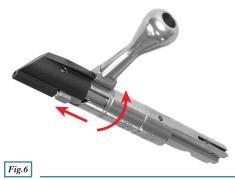

STEP 6

Pull the raised cocking indicator key backwards until the bolt can be rotated upwards into its open position (Fig. 6).

STEP 7

Reinstall bolt (Fig.7). The rifle is now ready for use. The old bolt shroud and cocking indicator can be kept for re-use.



